


Hydro upínač

pro válcové upínací stopky DIN 1835 typ A+B+E a DIN 6535 typ HB+HE

(průměry nad 20 mm pouze s redukčním pouzdrem)

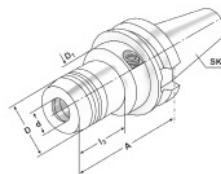

Název	Kužel	d	D	D ₁	l ₁	l ₂	l ₃	A		G 2,5 25.000 min ⁻¹
BT40.90.H.06.AD	BT40	6	26	50	37	10	43	90	AD	•
BT40.90.H.08.AD	BT40	8	28	50	37	10	43,5	90	AD	•
BT40.90.H.10.AD	BT40	10	30	50	42	10	44	90	AD	•
BT40.90.H.12.AD	BT40	12	32	50	47	10	44,5	90	AD	•
BT40.90.H.14.AD	BT40	14	34	50	47	10	47,5	90	AD	•
BT40.90.H.16.AD	BT40	16	38	50	52	10	47,5	90	AD	•
BT40.90.H.18.AD	BT40	18	40	50	52	10	47,5	90	AD	•
BT40.90.H.20.AD	BT40	20	42	50	52	10	47,5	90	AD	•
BT40.90.H.25.AD	BT40	25	50	50	58	10	63	90	AD	•
BT40.110.H.32.AD	BT40	32	60	60	62	10	83	110	AD	•
BT40.150.H.06.AD	BT40	6	26	50	37	10	102	150	AD	•
BT40.150.H.08.AD	BT40	8	28	50	37	10	103	150	AD	•
BT40.150.H.10.AD	BT40	10	30	50	42	10	104	150	AD	•
BT40.150.H.12.AD	BT40	12	32	50	47	10	105	150	AD	•
BT40.150.H.14.AD	BT40	14	34	50	47	10	105	150	AD	•
BT40.150.H.16.AD	BT40	16	38	50	52	10	106	150	AD	•
BT40.150.H.18.AD	BT40	18	40	50	52	10	107	150	AD	•
BT40.150.H.20.AD	BT40	20	42	50	52	10	108	150	AD	•
BT40.150.H.25.AD	BT40	25	50	50	58	10	123	150	AD	•
BT40.150.H.32.AD	BT40	32	60	60	62	10	123	150	AD	•
BT50.110.H.06.AD	BT50	6	26	80	37	10	43	110	AD	•
BT50.110.H.08.AD	BT50	8	28	80	37	10	43,5	110	AD	•
BT50.110.H.10.AD	BT50	10	30	80	42	10	44	110	AD	•
BT50.110.H.12.AD	BT50	12	32	80	47	10	42	110	AD	•
BT50.110.H.14.AD	BT50	14	34	80	47	10	42	110	AD	•
BT50.110.H.16.AD	BT50	16	38	80	52	10	45	110	AD	•
BT50.110.H.18.AD	BT50	18	40	80	52	10	47,5	110	AD	•
BT50.110.H.20.AD	BT50	20	42	80	52	10	47,5	110	AD	•
BT50.110.H.25.AD	BT50	25	50	80	58	10	47,5	110	AD	•
BT50.110.H.32.AD	BT50	32	60	80	62	10	47,5	110	AD	•

l₁ = maximální upínací délka

l₂ = maximální délkové nastavení

dodávka: bez montážního klíče